

CONTENTS

BEFORE USING THE DRYER/CONNECTIONS

PRECAUTIONS AND GENERAL RECOMMENDATIONS

DESCRIPTION OF THE DRYER

VENT CONNECTION

DOOR REVERSIBILITY

BEFORE USING THE DRYER/CONNECTIONS

1. Removing the packaging and check

- After unpacking, make sure that the dryer is undamaged. If in doubt, do not use the dryer. Contact After-Sales Service or your local retailer.
- Keep the packaging materials (plastic bags, polystyrene parts, etc.) out of reach of children, as they are potentially dangerous.

Minimum housing dimensions:

Width:	600 mm
Height:	850 mm
Depth:	560 mm

2. Electrical Connections

- Electrical connections must be carried out by a qualified technician in compliance with the manufacturer's instructions and current standard safety regulations.
- Electrical connection must comply with local Electricity Board regulations.
- Voltage information, power consumption and the required fuse protection is shown on the rating plate mounted at the rear of the dryer.
- The manufacturer cannot accept any liability for personal injury or damage to property resulting from failure to adhere to these instructions.
- The dryer must be earthed as prescribed by law.
- Do not use extension leads or multiple adaptors.
- Before any maintenance on the dryer disconnect it from the mains supply.
- Do not operate the dryer if it has been damaged during transport. Contact one of our After-Sales Service technicians.
- Mains cable replacement is only to be carried out by After-Sales Service.

3. Installation

- Do not install your dryer where it can be subject to extreme conditions, such as: poor ventilation, temperatures around freezing (or above 35°C).
- Remove the protective foil from the control panel.
- Level the dryer by adjusting the two front feet.
- Take care not to trap the mains cable between the dryer and the wall.


Stacking kit

Your dryer can be stacked on top of your front loading washing machine. To do this, use stacking kit AMH 542, available from your dealer.



PRECAUTIONS AND GENERAL RECOMMENDATIONS

1. Packing

The packing box may be fully recycled as confirmed by the  recycling symbol.

2. Energy saving tips

- Always dry a full load: depending on the type of laundry and the programme/drying time.
- Always use the maximum allowed spin speed of your washing machine. You will save time and energy when running your drying cycle.
- Do not overdry the laundry.
- Clean the lint filter after every drying cycle.
- Place your dryer in a room with a temperature between 15° C and 20° C. In case of higher temperature ventilate the room.
- Always select the correct programme/drying time for the load in order to obtain the desired drying results.
- Select the *gentle* option only with small loads.
- When drying cotton, for example: dry *iron dry* and *cupboard dry* loads together. Start with the *iron dry* programme/drying time setting, remove the laundry to be ironed at the end of that cycle and dry the remainder of the load on the *cupboard dry* setting.

3. Disposing of packaging and old appliances.

The dryer is built from reusable materials. The dryer must be disposed of in compliance with local waste disposal regulations.

- Before scrapping, cut off the power cable so that the dryer cannot be connected to the mains.

4. Child safety:

Children must not be allowed to play with the dryer.

5. General recommendations:

- Always set the programme/time selector knob to the "0" position after use. This prevents the dryer from being switched on accidentally.
- Before cleaning or carrying out maintenance, switch off the dryer and disconnect it from the mains supply.
- To clean the outside of the dryer, use a neutral detergent and a damp cloth.
- Do not use abrasive detergents.
- Wipe away lint from the door seal and the door using a damp cloth.
- If the lint filter mesh is clogged, clean it with water and a soft brush.

- If necessary, the power cable may be replaced with an identical one obtained from our After-Sales Service. The power cable must only be replaced by a qualified technician.

EC Declaration of Conformity

This dryer has been designed, constructed and distributed in compliance with the safety requirements of EC Directives:

- 93/68/EC.
- The dryer must only be used in the household for the prescribed uses.

DESCRIPTION OF THE DRYER

1. Work top
2. Contact pin
3. Door
 - To open the door: pull the handle
 - To close the door: push gently until closed.
4. Filter



VENT CONNECTION

On delivery from the factory, the outlet vent hose, together with an adaptor, is located in the drum.

Note: If the vent hose is not supplied, the AMH 577 kit, available from your dealer, should be used.

Installing the vent hose

1. Place a towel or the packing material on the right-hand side next to the dryer.
2. Place the dryer on its right-hand side (seen from the front) on the towel or the packing material.
3. Push the adapter into the hose (see illustration). Attach the adapter with the vent hose to the connection in the dryer base and lock it into place.



Venting outside

- Without kinking it, lead the vent hose outside (inside diameter 10 cm, maximum length with two bends 3 m).
- Ensure that the vent hose does not sag when stacking the dryer on a washing machine. It should only be placed horizontally or upwards.
- Do not connect to ventilation systems protected by fly nets. These can become clogged and cause malfunctioning of the dryer.
- Do not connect the vent hose to a chimney system.
- Do not connect the vent hose to the heating system. Only connect the hose to ventilation systems insulated against humidity.

Dryer operation without vent hose

- Only use the dryer in a large, well-ventilated room.
- Keep the room free of dust.

A minimum distance of 10 cm between rear of appliance and the wall must be observed.

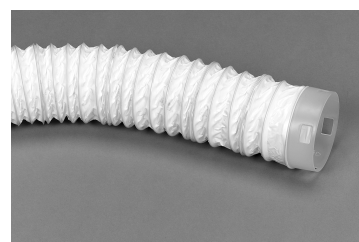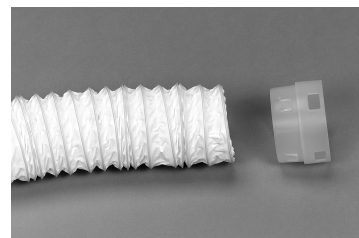

DOOR REVERSIBILITY

Door Reversibility

1. **Unplug the dryer.**
2. Open the door.
3. Using a spanner, turn the contact pin on the inside of the door (top) through 90° and remove it.
4. Remove the 2 door hinge screws, followed by the door.
5. Unscrew the 2 screws above and below the door lock system.
6. Removing the door lock:
Using a screwdriver, press down on the small rib in the upper opening and extract the door lock by pulling it towards you.
7. Reverse the door:
Fasten the door on the desired side using the 2 screws.
Insert the door lock system on the opposite side and lock it securely.
Fix the 2 screws above and below the door lock system.
8. Replace the contact pin in the inside of the door (top).

